 


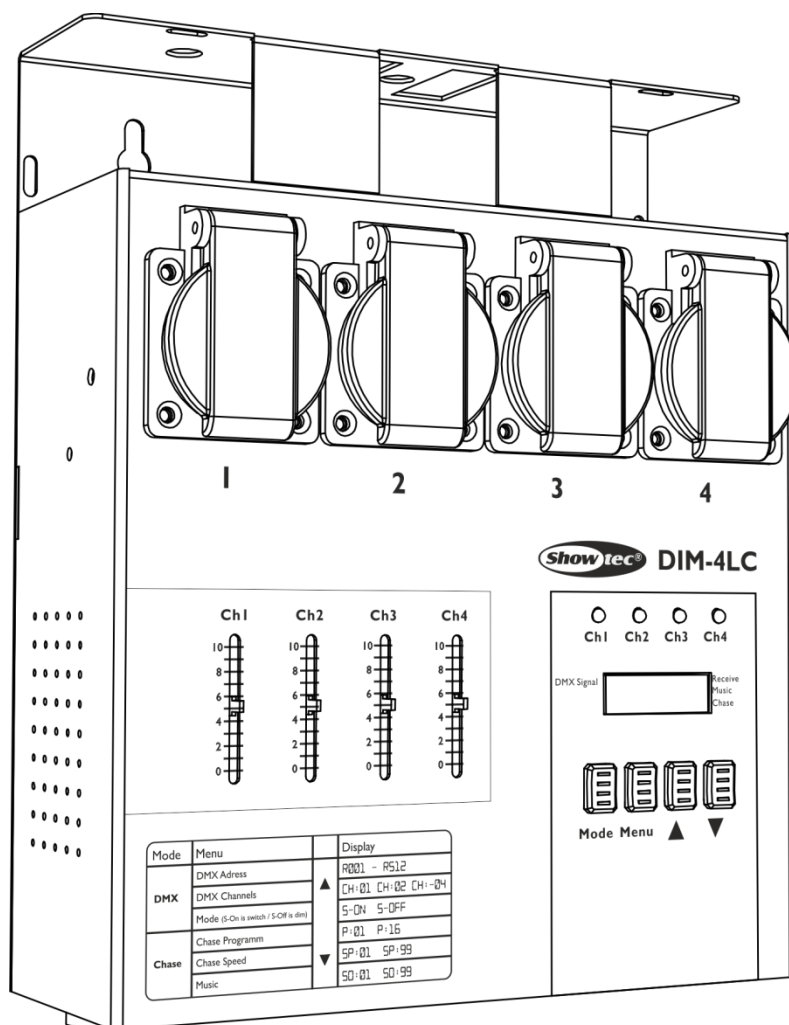

MANUAL



ENGLISH

DIM-4LC

V1

Ordercode: 50443

Table of contents

Warning2
 Safety Instructions2
 Operating Determinations4
 Rigging4
 Connection with the mains.....4
 Return Procedure.....5
 Claims.....5

Description of the device.....6
 Frontside.....6
 Underside.....7

Installation.....7

Set Up and Operation7

Menu overview8
 DMX Mode9
 DMX Addressing9
 DMX Configuration9
 Controlling output.....9
 Control mode9
 Built-in programs.....9
 Speed built-in programs9
 Sound mode9

Maintenance10
 Replacing the Fuse10

Troubleshooting10
 No Light10
 No Response to DMX.....10

Product Specifications11

Dimensions.....11

Notes12

Warning



**For your own safety, please read this user manual carefully
before your initial start-up!**

 


Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- DIM-4LC
- Schuko power cable (1,5 m)
- User manual

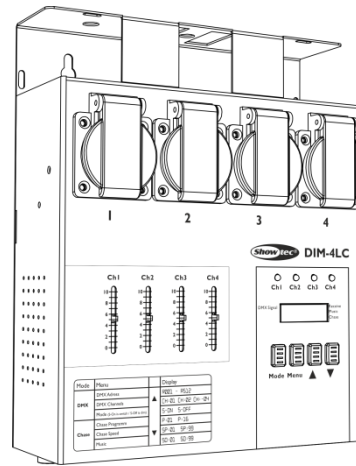

CAUTION!

**Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!**



Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.
With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!**



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never leave any cables lying around.
- Never use the device during thunderstorms, unplug the device immediately.
- Never leave various parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within children's reach, as they are potential sources of danger.
- Do not insert objects into air vents.
- Do not open the device and do not modify the device.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Do not switch the device on and off in short intervals, as this would reduce the system's life.
- Do not touch the device's housing bare-handed during its operation (housing becomes hot).
- Only use device indoor, avoid contact with water or other liquids.
- Only operate the device after having familiarized with its functions.
- Only install the device with the hanging-bracket.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged. Check the device and the power cord from time to time.
- Make sure that no side forces can impact on the truss system.
- The cable insert or the female part in the device must never be strained. There must always be sufficient cable to the device. Otherwise, the cable may be damaged which may lead to deadly electrical shocks.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If the lens is obviously damaged, it has to be replaced. So that its functions are not impaired, due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. The device must be installed out of the reach of children. Never leave the unit running unattended.
- For replacement use fuses of same type and rating only.
- The user is responsible for correct positioning and operating of the DIM-4LC. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- **WARRANTY:** Till one year after date of purchase.

Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light output and the illuminated surface must be bigger than 0.5 meter.
- The maximum ambient temperature $t_a = 40^{\circ}\text{C}$ must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40°C .
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash, etc.

You endanger your own safety and the safety of others!

Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

Procedure:


- If the DIM-4LC is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the DIM-4LC, with the mounting bracket, to the trussing system.
- The DIM-4LC must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety cable.
- When rigging, derigging or servicing the DIM-4LC, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always check if the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	PHASE
N	BLUE	BLACK	SILVER	NEUTRAL
	YELLOW/GREEN	GREEN	GREEN	PROTECTIVE GROUND

Make sure that the device is always properly connected to the earth!

Improper installation can cause serious injuries and/or damage of property!

**Return Procedure**

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail offersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 01) Your name
- 02) Your address
- 03) Your phone number
- 04) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

Description of the device

Features

The DIM-4LC is a compact but powerful dimming pack. It has 4 channels which each can be loaded up to 3A. With a total power consumption of 12A this dimming pack can fit any socket. The DIM-4LC can be fully controlled by DMX but has as well a built in chaser as well a sound-control function. Furthermore the DIM-4LC set can be set in a 1-channel, 2-channel or 4-channel mode. For easy use in any location the DIM-4LC has 4 local control faders which makes it a powerful and compact dimming pack for numerous applications.

- Input voltage: 230V AC, 50Hz
- Connections: 4 Schuko chassis outputs, 3-pin DMX IN, 3-pin DMX OUT
- Fuse: 8A/250V
- Fuse per channel: 3A/250V
- Channel output: 3A, total 12A
- Control: DMX-512, Stand alone, Music control, Local control
- DMX channels: 1, 2 or 4
- Mode: Dim or Switch
- Monitor LED per channel, DMX signal LED
- Dimensions: 220 x 82 x 275 mm (LxWxH)
- Weight: 3,5 kg

Frontside

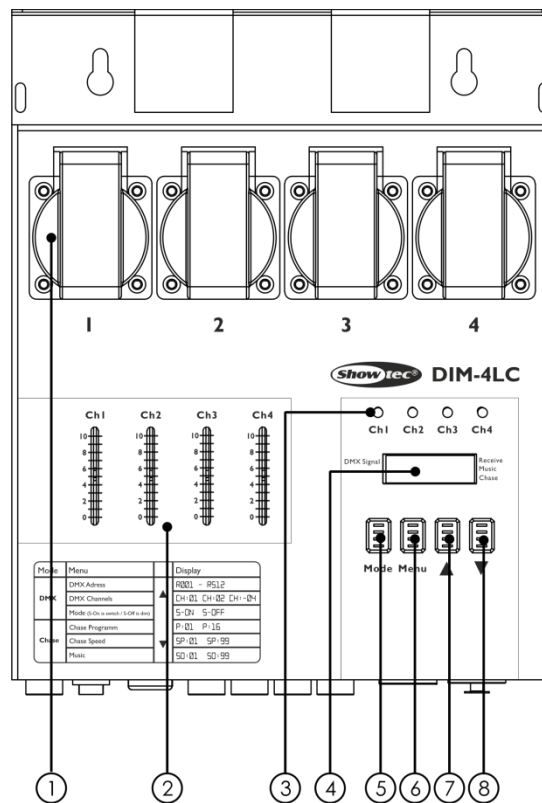 


Fig. 01

- 01) 4 x Schuko chassis output
- 02) 4 x Channel fader
- 03) Channel LED indicators
- 04) LED Display
- 05) Mode button
- 06) Menu button
- 07) Up button
- 08) Down button

Underside

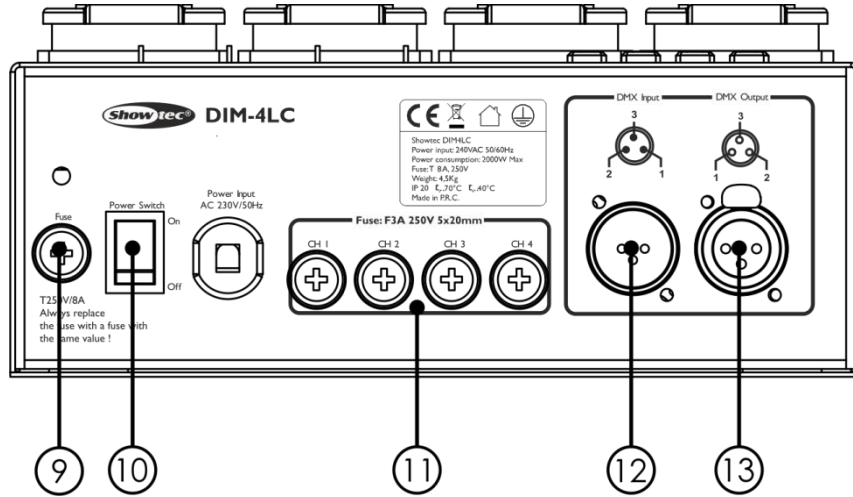 


Fig. 02

- 09) Fuse 8A / 250V
- 10) Powerswitch On / Off
- 11) 4 x fuse 3A / 250V
- 12) DMX signal connector (IN) 3-pin
- 13) DMX signal connector (OUT) 3-pin

Installation

Remove all packing materials from the DIM-4LC. Check if all foam and plastic padding is removed. Connect all cables.

Do not supply power before the whole system is set up and connected properly.

Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

 
Set Up and Operation

Follow the directions below, as they pertain to your preferred operation mode.

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Connect the device to the main power supply.

Menu overview

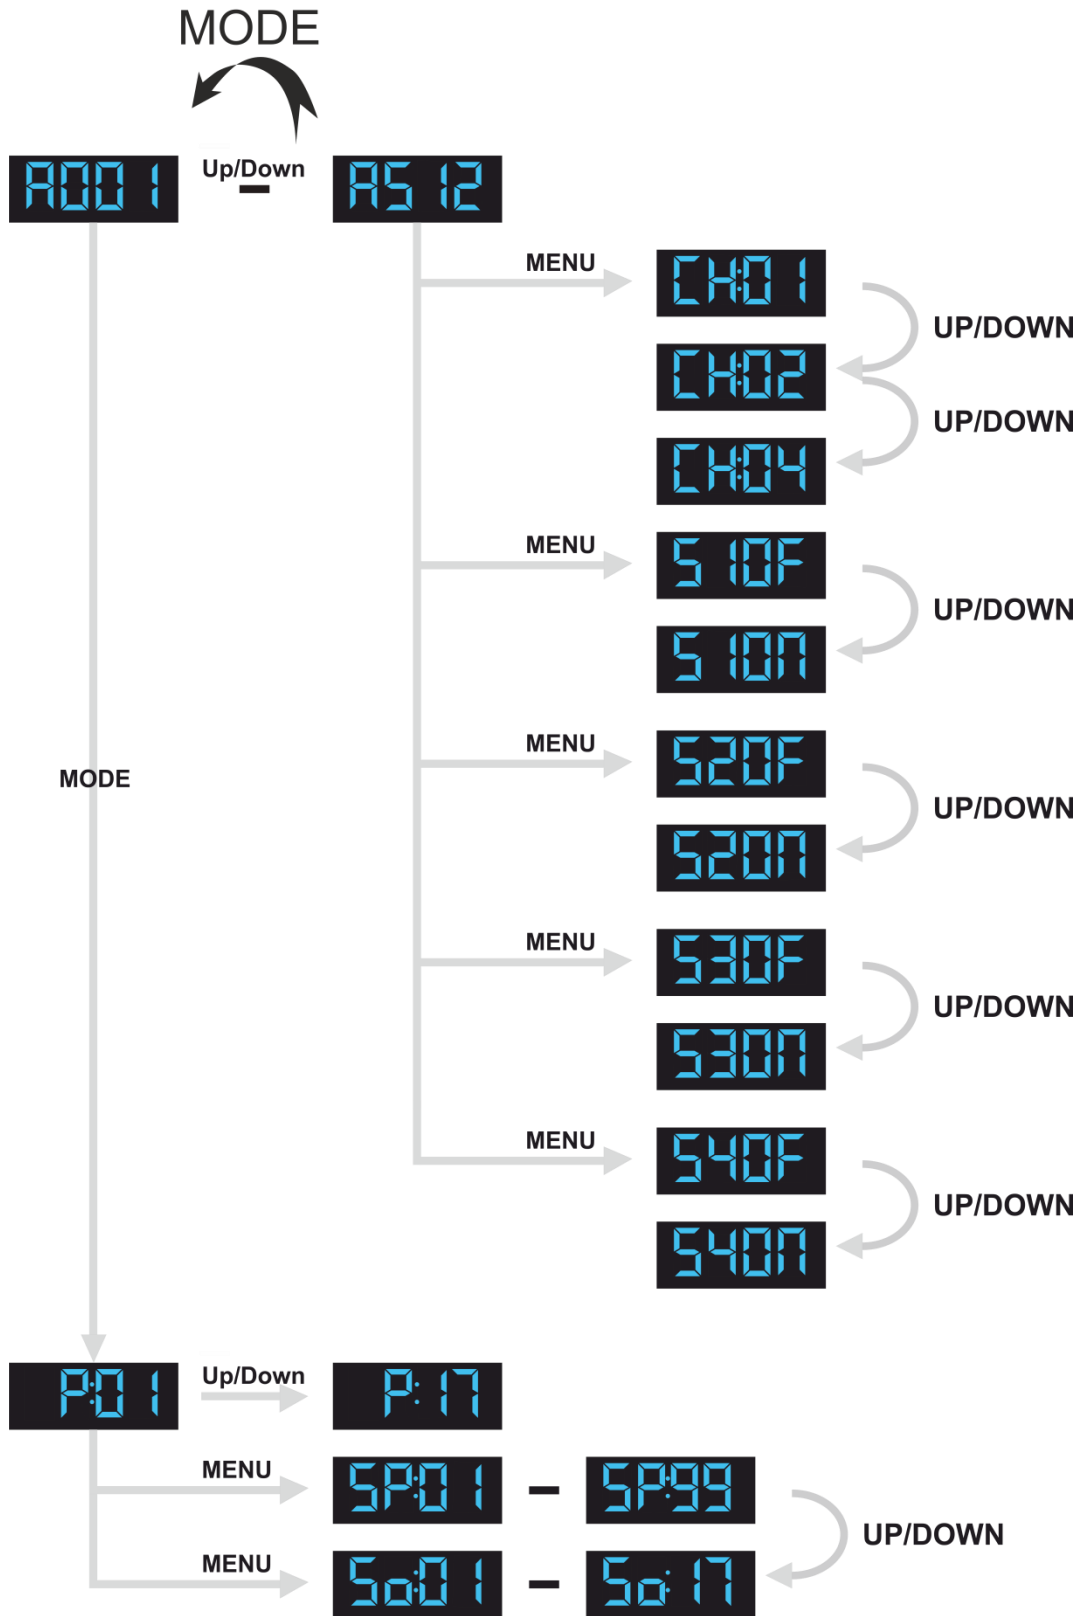

DMX Mode

 
DMX Addressing

The device will start up with the DMX address which can be set with the **Up / Down** buttons.

You can choose 512 different DMX addresses. The address has to be between **ADD 1** ^{Up/Down} **AS 12**. The device will remember the address after switching the device off.

DMX Configuration

Press the **Menu** button once and you can enter the DMX configuration. The DIM-4LC has three DMX configurations which can be selected with the **Up / Down** buttons.

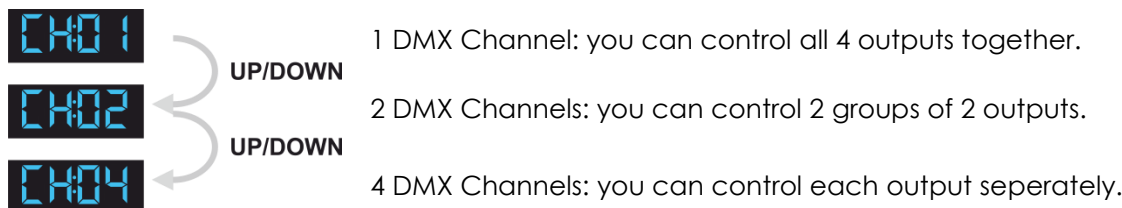

Controlling output

With this function you can set each output separately to a switch or dimmer channel. Press the **Menu** button until the display shows **S 107**. You can choose between **S 107** or **S 10F**. If you choose **S 107**, the output is a switch channel. Between 0-127 the switch channel has no function and between 128-255 the switch channel is "on". If you choose **S 10F**, the output is a dimmer channel. With the **Menu** button you can scroll between **S 107** and **S 407**.

Control mode

Built-in programs

With this menu you can control the built-in chase programs of the device. Press the **Mode** button until the display shows **P01**. With the **Up / Down** buttons you can choose between **P01** ^{Up/Down} **P:17**. The device is now in its stand-alone mode. To activate a chase program you'll have to use the channel faders. With the faders you activate the chase and set the dimmer intensity (0-100%) of the channel outputs at the same time. Program **P:17** is not a chase, you only control the dimmer intensity of the channel outputs.

Speed built-in programs

With this option you can set the speed of the built-in chase programs. Press the **Menu** button until the display will show **SP01**. With the **Up / Down** buttons you can set the speed between **SP01** - **SP99**. **P:17** has no speed function.

Sound mode

With this mode you can choose a sound chase program to control the device. Press the **Menu** button until the display will show **So01**. With the **Up / Down** buttons you can choose between **So01** - **So:17**. The device reacts now to the beat of the music and will make a certain chase depending on which program you choose. The faders are used in the same way as in the built-in chase programs. Program **So:17** is not a chase, you only control the dimmer intensity of the channel outputs.

Maintenance

The Showtec DIM-4LC requires almost no maintenance. However, you should keep the unit clean. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Do not use alcohol or solvents.

Keep connections clean. Disconnect electric power, and then wipe the DMX connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Replacing the Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below:

- 01) Unplug the unit from electric power source.
- 02) Insert a flat-head screwdriver into a slot in the fuse cover. Turn the screwdriver to the left, at the same time gently push a bit (Turn and Push). The fuse will come out.
- 03) Remove the used fuse. If brown or unclear, it is burned out.
- 04) Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Troubleshooting

No Light

If the light effect does not operate properly, refer servicing to a technician.

Suspect two potential problem areas as: the power supply, the fuse.

- 01) Power supply. Check that the unit is plugged into an appropriate power supply.
- 02) The fuse. Replace the fuse. See page 10 for replacing the fuse.
- 03) If all of the above appears to be O.K., plug the unit in again.
- 04) If you are unable to determine the cause of the problem, do not open the DIM-4LC, as this may damage the unit and the warranty will become void.
- 05) Return the device to your Showtec dealer.

No Response to DMX


Suspect the DMX cable or connectors, a distributor malfunction, a controller malfunction, a light effect DMX card malfunction.

- 01) Check the DMX setting. Make sure that DMX addresses are correct.
- 02) Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
- 03) Determine whether the distributor, controller or light effect is at fault. If the distributor or controller does not operate properly, take the distributor or controller in for repair. Otherwise, take the DMX cable and the light effect to a qualified technician.

Product Specifications

Model:	Showtec DIM-4LC
Input voltage:	230V AC, 50Hz
Fuse:	8A/250V
Fuse channel:	3A/250V
Channel output:	3A, total 12A
Connections:	4 Schuko chassis outputs, 3-pin DMX IN, 3-pin DMX OUT
Control:	DMX-512, Stand alone, Music control, Local control
DMX channels:	1, 2 or 4
Mode:	Dim or Switch
Dimensions:	220 x 82 x 275 mm (LxWxH)
Weight:	3,5 kg

 Dimensions

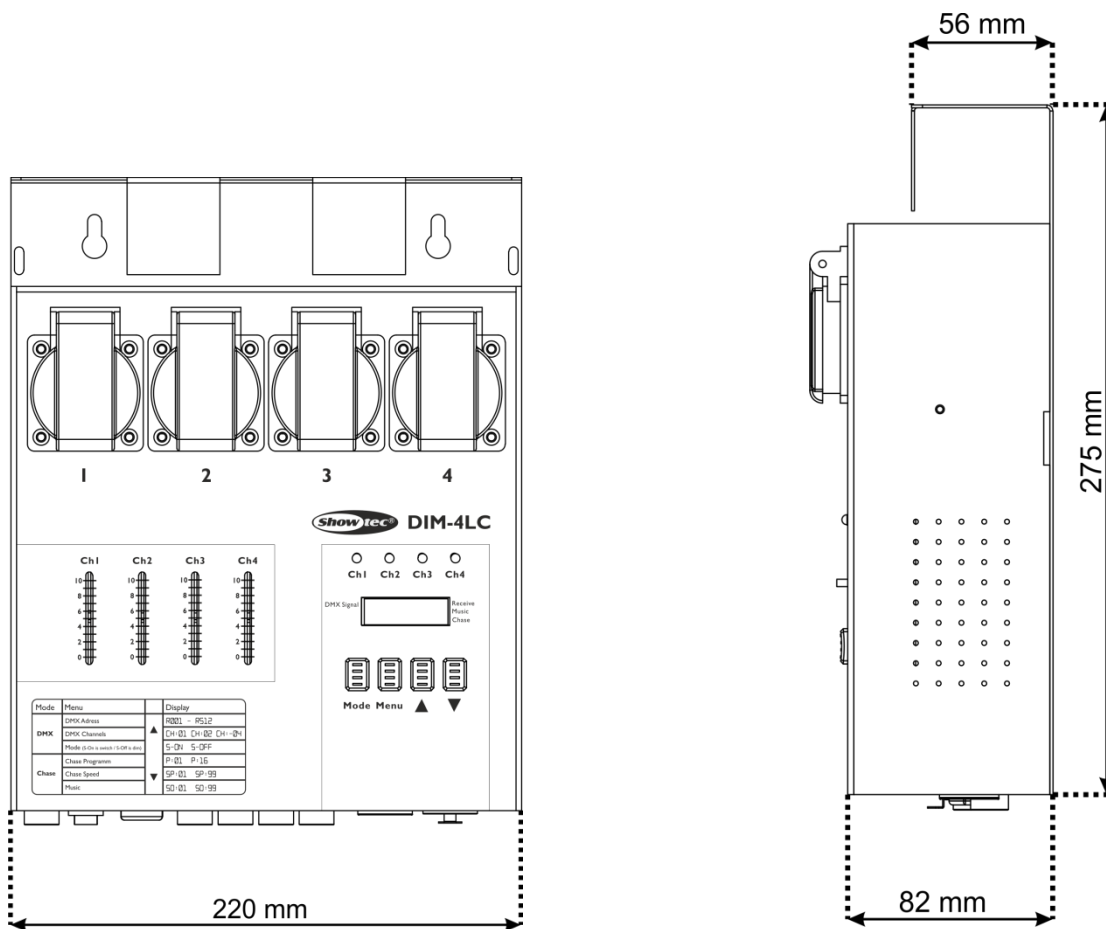

Design and product specifications are subject to change without prior notice.



Website: www.Showtec.info
 Email: service@highlite.nl



©2016 Showtec