




MANUAL



ENGLISH

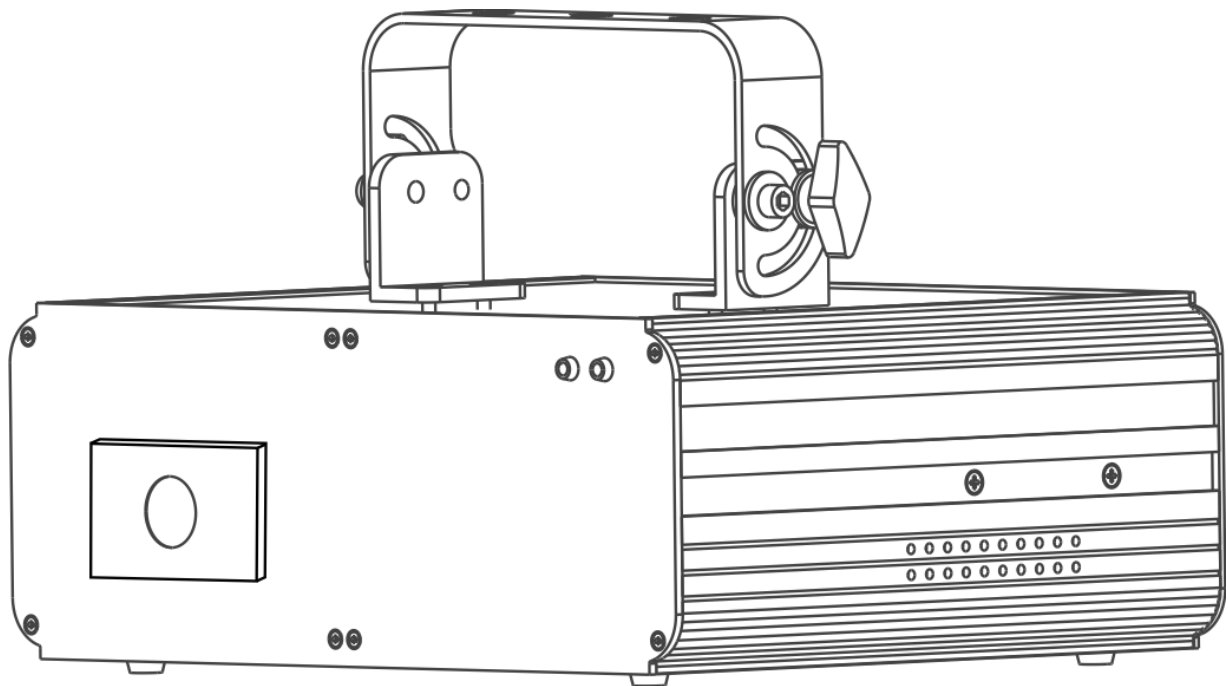

Galactic FX RGB-1000 V3

Ordercode: 51343

Table of contents

Warning	2
Unpacking Instructions	2
Safety Instructions	3
Operating Determinations	5
Laser safety for a Class 4 Laser Product	5
Rigging	7
Connection with the mains	7
Return Procedure	8
Claims	8
Description of the device	9
Overview	9
Backside	10
Installation	10
Set Up and Operation	10
Control Modes	12
One Galactic (Stand-alone)	12
One Galactic (Sound-controlled built-in programs)	12
Multiple Galactics (Master/Slave Mode)	12
Multiple Galactics (DMX Control)	13
Fixture Linking	14
Data Cabling	14
Control Panel	15
Control Mode	15
DMX Addressing	15
Menu Overview	16
Main Menu Options	16
1. Built-in Auto Effects	16
2. DMX Mode	16
3. Master/Slave Mode	17
4. Horizontal/Mirror Flip Mode	17
DMX Channels	17
7 channels (Basic)	17
19 channels (Advanced)	18
Patterns	21
Maintenance	22
Replacing the Fuse	22
Troubleshooting	22
No Light	22
No Response to DMX	22
Product Specifications	24
Dimensions	25

Warning


 For your own safety, please read this user manual carefully before your initial start-up! 

Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- Showtec Galactic RGY-140 MKII
- IEC Power cable (1,5 m)
- 2 keys for the interlock
- Remote control plug
- User manual

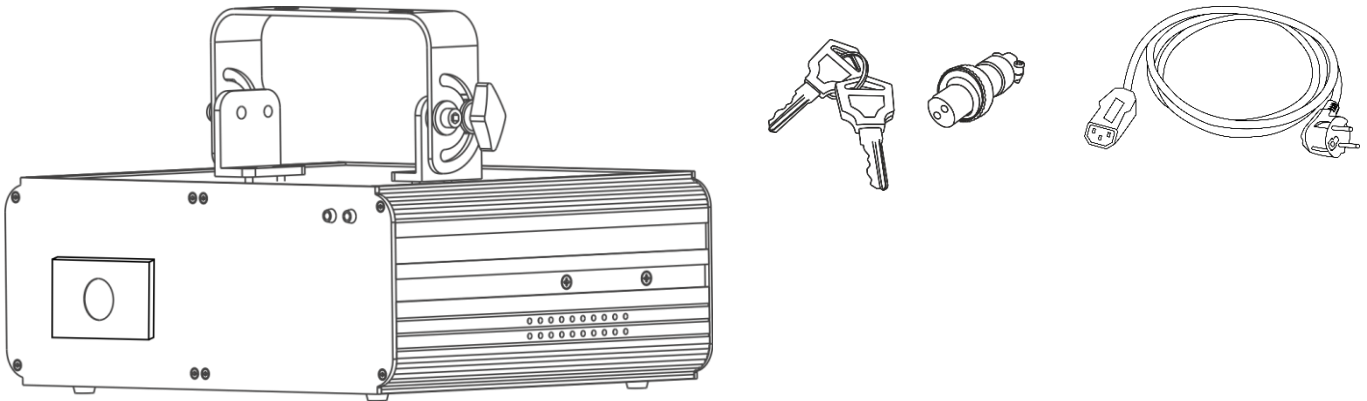





   **LASER LIGHT**
AVOID DIRECT EYE EXPOSURE
CLASS 3B LASER PRODUCT
Maximum Output CW
1000mW LDC3P15B
532/473/671nm
Classified per EN 60825-1:2001

DANGER

 **LASER CLASS 4**

CAUTION - LASER RADIATION
AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION
CLASS 4 LASER PRODUCT


 **CAUTION! Eyedamages!!!**
Never look directly into the lightsource!!!
Never project a single laser point!!! 

 **CAUTION!**
Keep this device away from rain and moisture!
Unplug mains lead before opening the housing! 

Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual

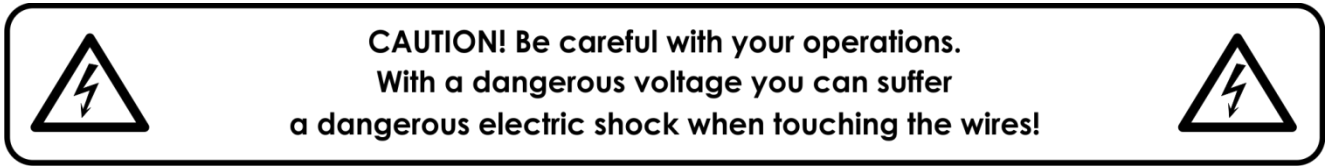

Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!
- Never modify, bend, mechanically strain, put pressure on, pull or heat up the power cord.
- Never strain the cable insert or the female part in the device. There must always be sufficient cable going to the device. Otherwise, the cable will be damaged, which can cause serious damage.
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never place any material over the lens.
- Never look directly into the light source.
- Never leave any cables lying around.
- Never use the device during thunderstorms, unplug the device immediately.
- Never leave various parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within children's reach, as they are potential sources of danger.
- Never aim the laser beam at people or animals!
- Never point a laser at aircraft. This is a federal offense.
- Never point un-terminated laser beams into the sky.
- Never open the laser housing. The high laser power levels inside of the protective housing can start fires, burn skin and will cause instant eye injury.
- Do not insert objects into air vents.
- Do not connect this device to a dimmer pack.
- Do not open the device and do not modify the device.
- Do not point lasers at highly reflective surfaces such as windows, mirrors and shiny metal. Even laser reflections can be hazardous.
- Do not expose the output optic (aperture) to cleaning chemicals.
- Do not use the laser if the laser appears to be emitting only one or two beams.
- Do not use the laser if housing is damaged or open, or if optics appear damaged in any way.
- Do not operate laser without first reading and understanding all safety and technical data in this manual. Never look into the laser aperture or laser beams.
- Do not switch the device on and off in short intervals, as this would reduce the device's life.
- Do not shake the device. Avoid brute force when installing or operating the device.

- After set up and prior to public use, test laser to ensure proper function. Do not use the laser if any defect is detected. Do not use, if the laser emits only one or two laser beams rather than dozens/hundreds, as this could indicate damage to the diffraction grating optic, and could allow emission of higher laser levels.
- Only use device indoors, avoid contact with water or other liquids.
- Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Avoid eye or skin exposure to direct or scattered radiation of class 3B laser product.
- Always check the regulations when using a class 3B laser product.
- Always check and position the laser before anybody enters the room, when the laser is facing an area with people.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged. Check the device and the power cord from time to time.
- Make sure that the core diameter of extension cords and power cords is sufficient for the required power consumption of the device.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If the lens is obviously damaged, it has to be replaced, so that its functions are not impaired due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Device must be installed out of the reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement use fuses of same type and rating only.
- The operation of a class 3B laser show laser is only allowed if the show is controlled by a skilled and well-trained operator familiar with the data included in this manual.
- The user is responsible for correct positioning and operating of the laser. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- The laser will only work between 15-35°C.
- After 3 hours working, you must shut off the laser and let the laser diode cool off for 30 minutes, otherwise the laser may become damaged and the warranty becomes void.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



CAUTION! Eyedamages!!!
Avoid looking directly into the lightsource!!!
(meant especially for epileptics)!!!



Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light-output and the illuminated surface must be more than 1 meter.
- The maximum ambient temperature $t_a = 35^{\circ}\text{C}$ must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 30°C .
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash etc.

You endanger your own safety and the safety of others!

Laser safety for a Class 4 Laser Product

This product is a Class 4 laser with 1220 mW visible output.

Class 4 is the highest and most dangerous class of laser, including all lasers that exceed the Class 3B AEL. By definition, a class 4 laser can burn the skin, or cause devastating and permanent eye damage as a result of direct, diffuse, specular reflections or indirect beam viewing.

These lasers may ignite combustible materials, and thus may represent a fire risk.

These hazards may also apply to indirect or non-specular reflections of the beam, even from apparently matte surfaces—meaning that great care must be taken to control the beam path.

Class 4 lasers must be equipped with a key switch and a safety interlock.

CAUTION! Only Laser Safety Officers who are officially certified by a regulatory body or authorized training organization are allowed to use class 4 lasers in public. The Laser Safety Officer is responsible for all aspects when using this laser, including following all locally applicable safety laws and regulations. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this laser.



CAUTION: AVOID EXPOSURE TO BEAM: Avoid direct eye contact with laser light. Never intentionally expose your eyes or others to direct laser radiation.

Compliance Statement

Your Galactic Laser has been designed to comply with FDA and IEC Standards for its classification. The Galactic is a Class 4 laser product.

Laser Safety and Compliance Information

The Galactic is manufactured to comply with the IEC 60825-1 and in accordance with U.S. Food and Drug Administration (FDA) Standards Listed under FDA Document 21 CFR 1040 and subsequent laser notices.

Product Classification and Manufacturing Label Identification

Laser Classification	Class 4
Cooling	TE Cooling and Cooling fan
Laser medium	wavelength 450 nm / Blue (DPSS), 920mW
	wavelength 532 nm / Green (DPSS), 110mW
	wavelength 638 nm / Red (Laser Diode), 190mW
Output	1220 mW
Beam Diameter	<20mm at aperture
Pulse Data All pulses	< 4Hz (>0.25sec)
Divergence (each beam)	<2 mrad
Divergence (total light)	<160 degrees

The legal requirements for using laser entertainment products vary from country to country. The user is responsible for the legal requirements at the location/country of use.

Further guidelines and safety programs for safe use of lasers can be found in the ANSI Z136.1 Standard "For Safe Use of Lasers", available from www.laserinstitute.org. Many local governments, corporations, agencies, military and others, require all lasers to be used under the guidelines of ANSI Z136.1. Laser Display guidance can be obtained via the International Laser Display Association, www.laserist.org.

CAUTION: The use of corrective eye wear or optics for viewing at distances such as telescopes or binoculars within a distance of 100mm may pose an eye hazard.



This laser product is a Class 4 laser and has an Interlocked housing.




There are no user serviceable parts inside. Tampering or removing warranty seals will void your products limited warranty.



Combo label with the Product Model Number, Serial Number, Date of Manufacturing, Laser Light Warning Label, Warranty Void Label and Interlocked Housing Label

Proper Usage Safety and Compliance Information

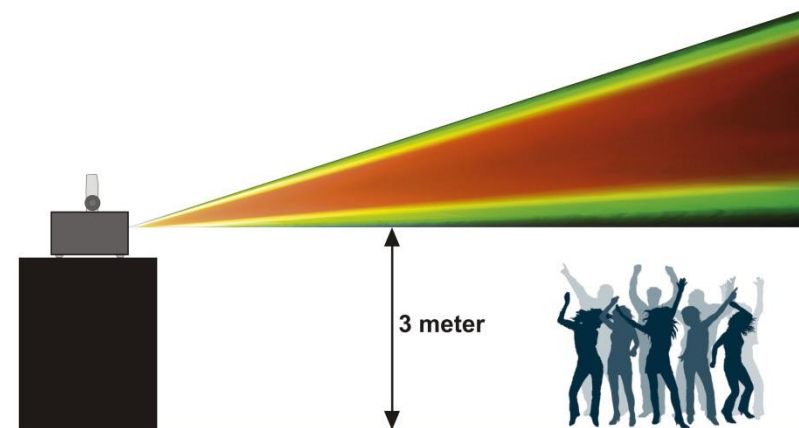

According to FDA Regulations you should operate this product as stated on the left.

Rigging


Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

Procedure:

- If the Galactic is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the Galactic, with the mounting-bracket, to the trussing system.
- The Galactic must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the Galactic, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

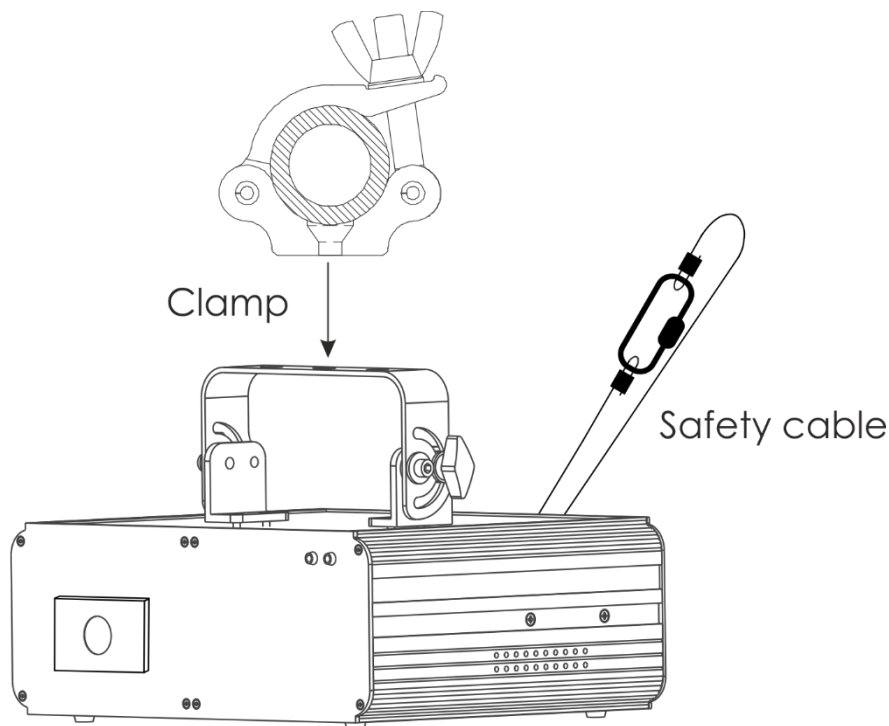


The Galactic can be placed on a flat stage floor or mounted to any kind of truss with a clamp.

Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	PHASE
N	BLUE	BLACK	SILVER	NEUTRAL
	YELLOW/GREEN	GREEN	GREEN	PROTECTIVE GROUND

Make sure that the device is always connected properly to the earth!

Improper installation can cause serious damage to people and property!



⚠ Return Procedure ⚠

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail aftersales@highlite.com and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 01) Your name
- 02) Your address
- 03) Your phone number
- 04) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any short-comings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

Description of the device

Features

The Showtec Galactic FS RGB-1000 is a laser effect with high output and great effects.

- Power Input: AC 100-240V, 60/50Hz
- Power Consumption: 70 Watt
- Beam Diameter <20mm at aperture
- Laser Class: 4
- Laser Modulation: TTL
- Laser Safety: EN/IEC 60825-1 Ed 2, 2007-03
- Laser Color: Red, Green, Yellow, Blue, Purple, Cyan, White
- Laser Power: 1220mW: wavelength 450 nm / Blue (DPSS), 920mW
wavelength 532 nm / Green (DPSS), 110mW
wavelength 638 nm / Red (Laser Diode), 190mW
- Scan Angle: +/-80°
- Control Modes: Auto, Sound, Master/Slave, DMX
- DMX channels: 7 and 19 channels
- Divergence (each beam) <2 mrad; Divergence (total light) <160 degrees
- 3-pin DMX In and 3-pin DMX Out
- 3-digit LED Display
- Compact strong metal housing
- Sound-controlled via built-in microphone
- Safety Features: Key switch, Interlock
- Fuse 1,6AL/250V
- Dimensions: 290 x 260 x 205 mm (LxWxH)
- Weight: 4 kg
- Accessories: 2 Keys, Interlock remote plug

Overview

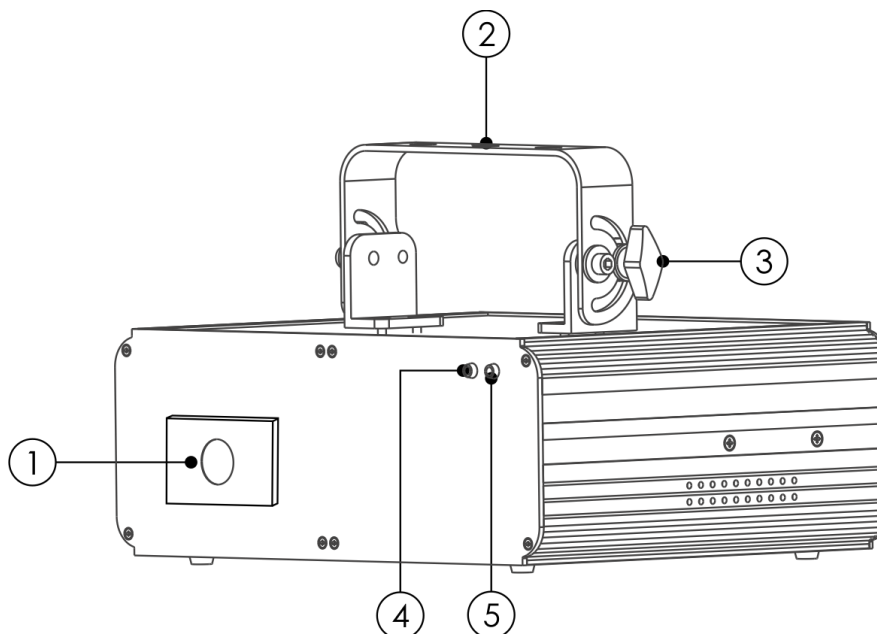


Fig. 01

- 01) Lens
- 02) Mounting bracket
- 03) Adjustment screw
- 04) LED power indicator
- 05) LED sound control indicator

Backside

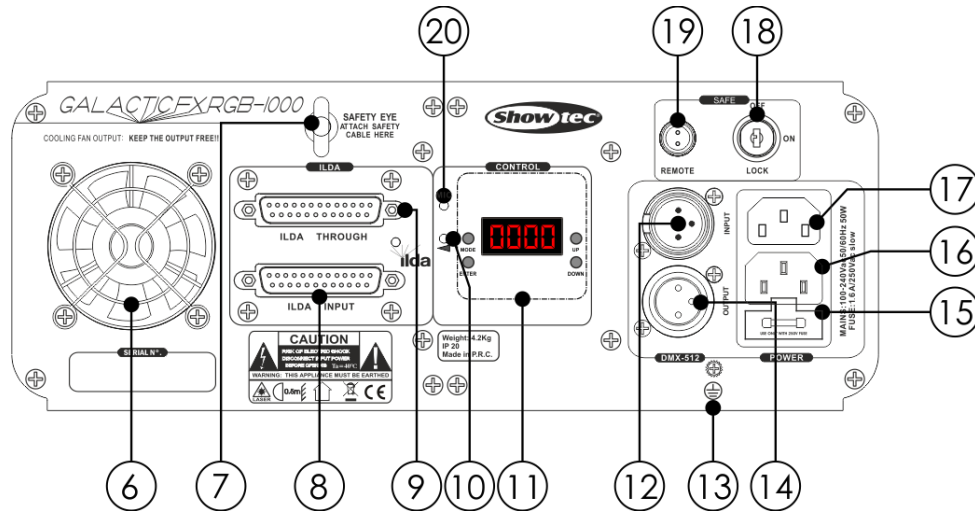


Fig. 02

- 06) Cooling fan
- 07) Safety eye
- 08) ILDA Input
- 09) ILDA Through
- 10) Sound Sensitivity (Use a micro screwdrive to adjust)
- 11) LED Display + control buttons
- 12) 3-pin DMX signal connector (IN)
- 13) Ground/Earth connection
- 14) 3-pin DMX signal connector (OUT)
- 15) IEC Power IN connector 100-240VAC
- 16) Fuse 1,6A/250V
- 17) IEC Power OUT connector 100-240VAC
- 18) Interlock
- 19) Remote control plug
- 20) Built-in microphone

NOTE: Knowledge of DMX is required to fully utilize this unit.

Installation

Remove all packing materials from the Galactic. Check if all foam and plastic padding is removed. Connect all cables.

Do not supply power before the whole system is set up and connected properly.

Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

Set Up and Operation


Follow the directions below, as they pertain to your preferred operation mode.

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Connect the device to the main power supply. The device can be sound-controlled as it is equipped with a built-in microphone.

The Interlock plug/remote plug and safety keys are included in the box.
The interlock is the "included-in-the-box" successor for the optional remote interlock (51316)


⚠ They should be kept with the Galactic laser !!! ⚠

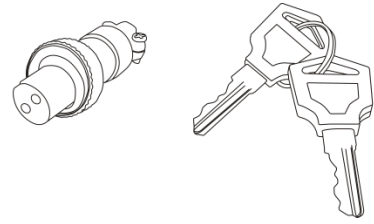

The following safety precautions should be followed:


- The interlock plug should be placed on the backside **(19)** of your Galactic laser.
- The keys should be put into the lock **(18)** of your Galactic laser.

⚠ Warning ⚠

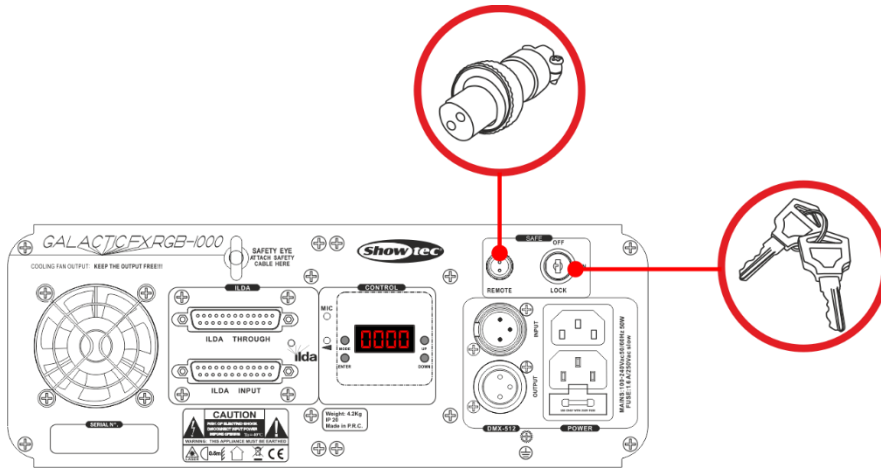

Exclusion of liability

Be aware that in some countries, there are additional regulations, regarding the use of laser devices. Therefore, we strongly advise you to verify your national laws with your authorities: We do not take any responsibility for eventual discrepancies, changes or adaptations regarding lawful use of laser devices.

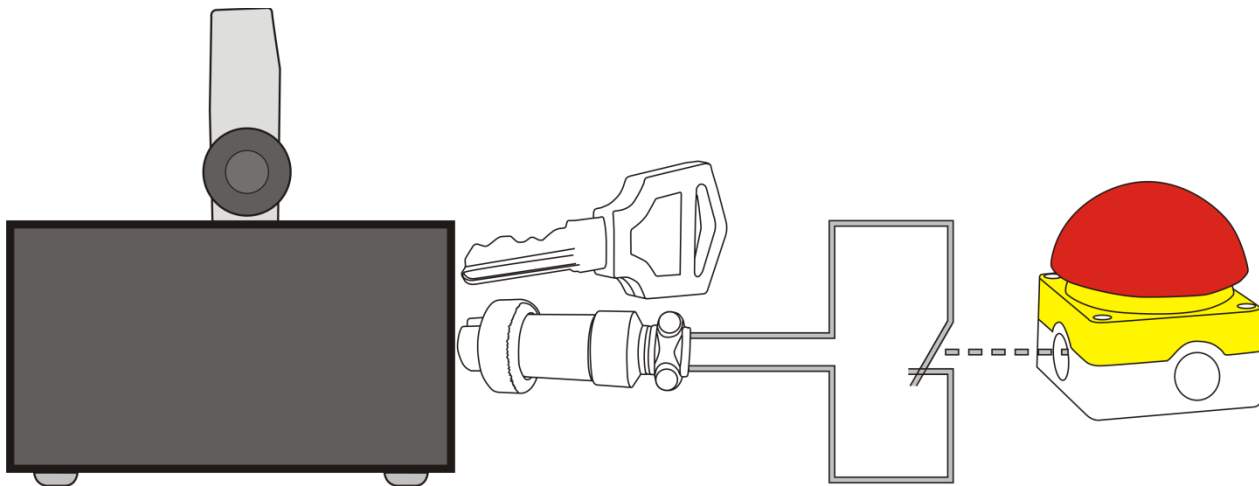

Control Modes

There are 4 modes:

- Built-in programs (stand-alone)
- Sound-controlled built-in programs
- Master/Slave
- DMX-512 (19CH)

One Galactic (Stand-alone)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) When the Galactic is not connected by a DMX-cable, it functions as a stand-alone device.
- 05) Please see page 16 for more information about the Built-in auto programs.

One Galactic (Sound-controlled built-in programs)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) When the Galactic is not connected with a DMX-cable, it functions as a stand-alone device.
- 05) Please see page 16 for more information about the Sound-controlled mode.

Multiple Galactics (Master/Slave Mode)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) Use a 3-pin XLR cable to connect the Galactics.

The pins:



- 01) Earth
- 02) Signal (-)
- 03) Signal (+)

- 05) Link the units as shown in Fig. 03, connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units. You can use the same functions on the master device as described on page 16 (Built-in or Sound-controlled). This means on the master device you can set your desired operation Mode and all slave devices will react the same as the master device.

Multiple Galactics Master/Slave Set Up


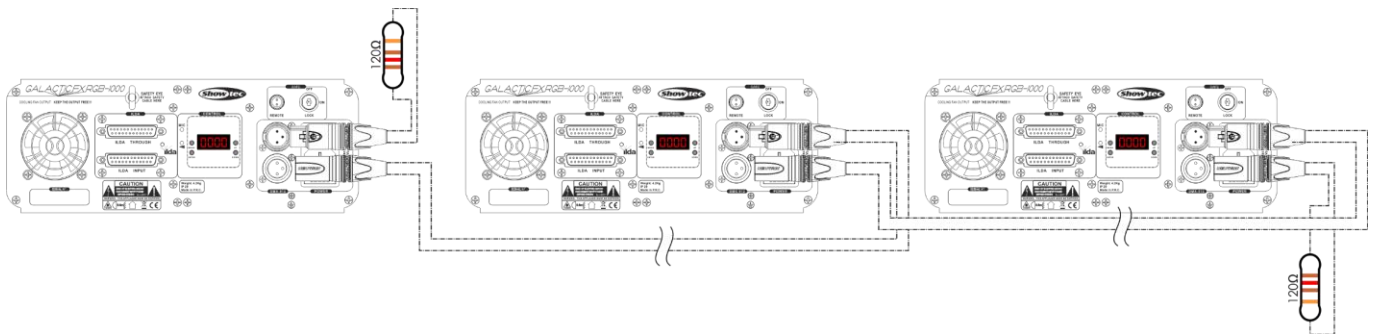


Fig. 03

Multiple Galactics (DMX Control)

- 01) Fasten the effect light onto firm trussing. Leave at least 1 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) Use a 3-p XLR cable to connect the Galactics and other devices.

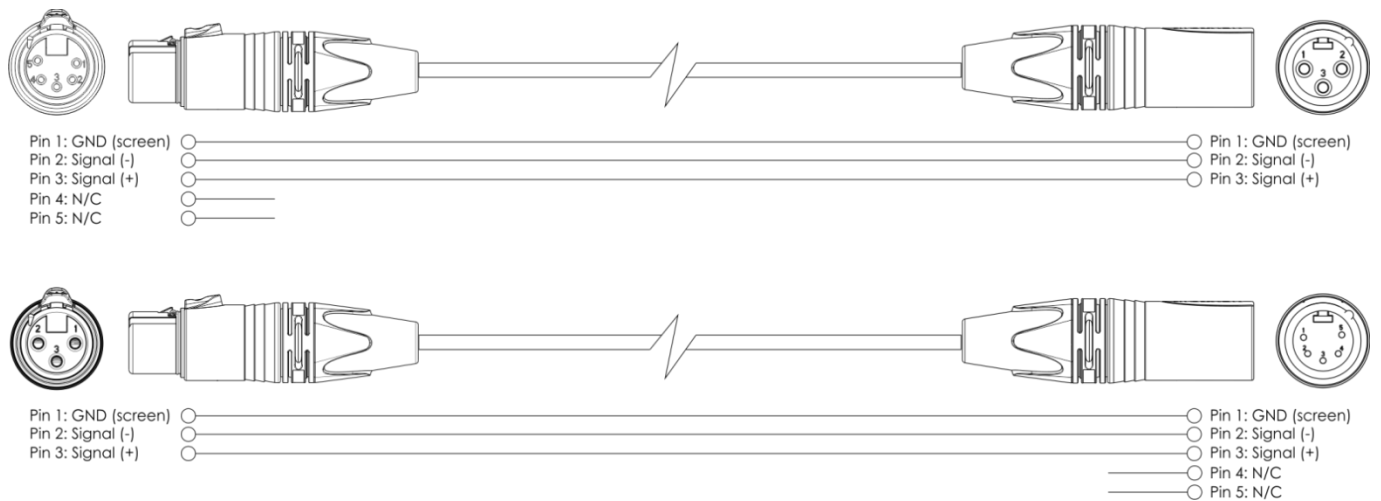

- 05) Link the units as shown in Fig. 04, Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
- 06) Supply electric power: Plug electric mains power cords into each unit's IEC socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

Multiple Galactics DMX Set Up

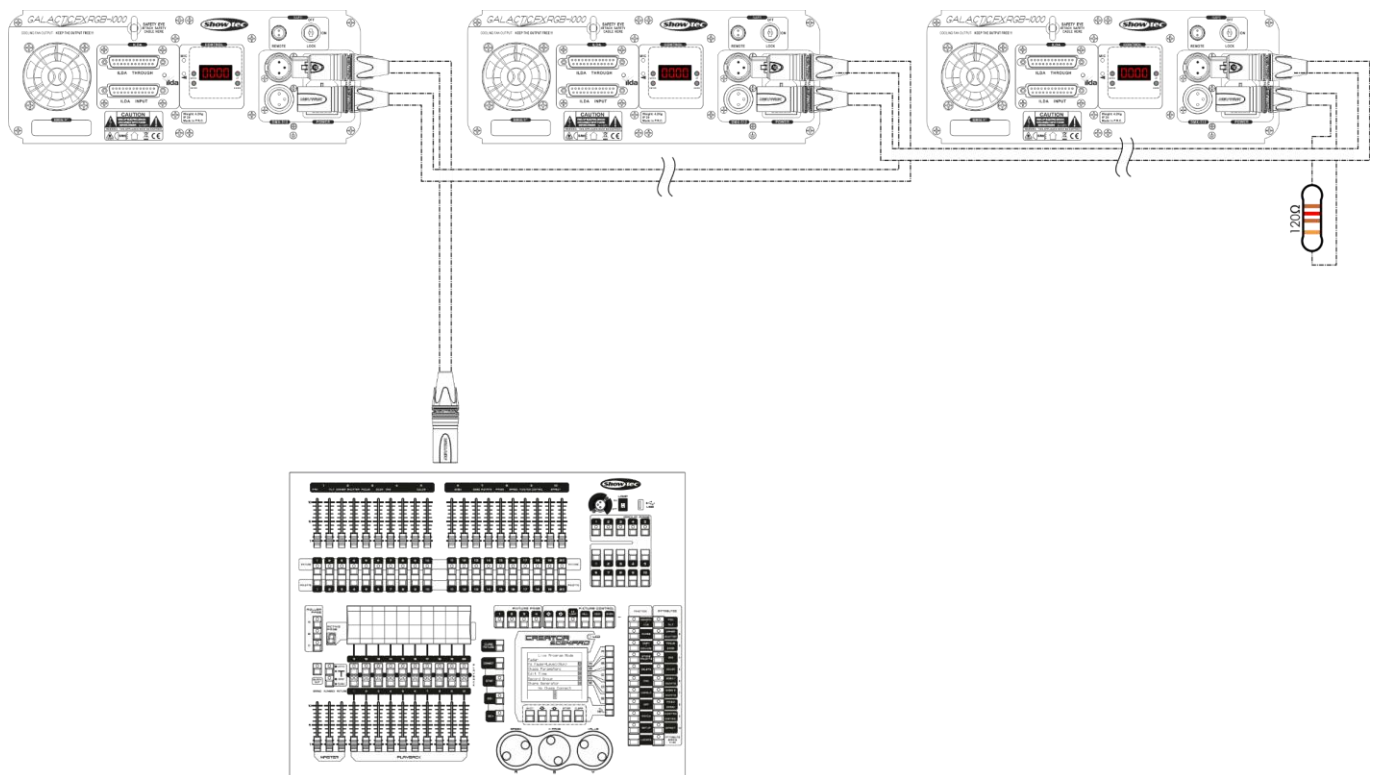


Fig. 04

Note: Link all cables before connecting electric power

Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Important: Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.



Maximum recommended DMX data link distance: 100 meters

Maximum recommended number of fixtures on a DMX data link: 30 fixtures

Data Cabling

To link fixtures together, you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

DAP Audio Certified DMX Data Cables

- DAP Audio cable for all-round use. bal. XLR/M 3 p. > XLR/F 3 p.
Ordercode FL01150 (1,5m.), FL013 (3m.), FL016 (6m.), FL0110 (10m.), FL0115 (15m.), FL0120 (20m.).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. Ordercode FL71150 (1,5m.), FL713 (3m.), FL716 (6m.), FL7110 (10m.).

The Galactic can be operated with a controller in **control mode** or without the controller in **stand-alone mode**.

Control Panel

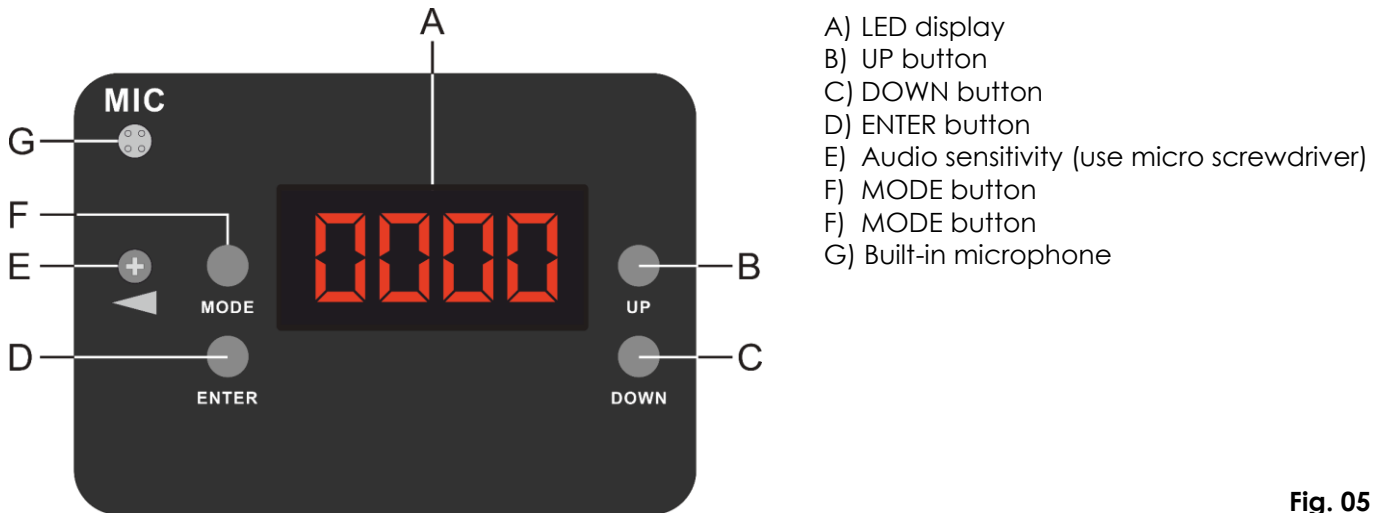


Fig. 05

Control Mode

The fixtures are individually addressed on a data-link and connected to the controller. The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address the next time.)

DMX Addressing

The control panel on the front side of the base allows you to assign the DMX fixture address, which is the first channel from which the Galactic will respond to the controller.

Please note when you use the controller, the unit has **19** channels.

When using multiple Galactics, make sure you set the DMX addresses right.

Therefore, the DMX address of the first Galactics should be **1(001)**; the DMX address of the second Galactic should be **1+19=20 (d020)**; the DMX address of the third Galactic should be **20+19=39 (d039)**, etc.

Please, make sure that you do not have any overlapping channels in order to control each Galactic correctly.

If two or more Galactics are addressed similarly, they will work similarly.

Controlling:

After having addressed all Galactic fixtures, you may now start operating these via your lighting controller.

Note: After switching on, the Galactic will automatically detect whether DMX-512 data is received or not. If there is no data received at the DMX-input, the "LED" on the control panel will not flash.

The problem may be:

- The XLR cable from the controller is not connected with the input of the Galactic.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

Note: It is necessary to insert an XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.

Menu Overview



Main Menu Options

Axb	Built-in auto and sound-controlled effects
d001	DMX Mode
SLAV	Master/Slave Mode
S=F	Horizontal/Mirror Flip Mode

You can only change settings when the display is blinking. If you cannot change certain values, please press the **MODE** button once and then adjust the value.

1. Built-in Auto Effects

01) Press the **MODE** button until one of the following names appears on the screen:



- 02) While the display is blinking, press the **Up** and **Down** buttons to choose the desired effect.
 03) Press the **ENTER** button to confirm your choice.

The software will now run a pre-programmed laser show. There are 9 built-in auto effects (A**) + 9 of their sound-controlled counterparts (S**).

2. DMX Mode

In this menu you can set the DMX address.

- 01) Press the **MODE** button until the display shows **d001**.
 02) Use the **Up** and **Down** buttons to select the required address between **d001** **d492**.
 04) Press the **ENTER** button to save changes.

3. Master/Slave Mode

- 01) Press the **MODE** button until the display shows **SLAV**.
- 02) Press the **ENTER** button to confirm.
- 03) The device is now operating in Slave mode and it will react the same as the master device.

4. Horizontal/Mirror Flip Mode

In this menu you can choose the way in which your laser show is going to be displayed.

- 01) Press the **MODE** button until one of the following names appears on the display:

Horizontal Flip

Horizontal Flip + Mirror Flip

Normal View

Normal View + Mirror Flip

- 02) Press the **Up** and **Down** buttons you to choose your preferred display setting.
- 03) Press the **ENTER** button to confirm your choice.

DMX Channels

7 channels (Basic)

Channel 1 – Control modes  **Only when Ch 1 is set between 235-244, Ch 2-7 will function.** 

0-18	Laser off
19-30	Auto shows
31-42	3D Auto shows
43-54	Auto beam show
55-66	Lumia effect
67-78	Effect 1
79-90	Effect 2
91-102	Effect 3
103-114	Effect 4
115-126	Effect 5
127-138	Auto shows, sound-controlled
139-150	3D Auto show, sound-controlled
151-162	Auto beam show, sound-controlled
163-174	Lumia effect, sound-controlled
175-186	Effect 1, sound-controlled
187-198	Effect 2, sound-controlled
199-210	Effect 3, sound-controlled
211-222	Effect 4, sound-controlled
223-234	Effect 5, sound-controlled
235-244	Manual effect 1
245-255	Manual effect 2

Channel 2 – Rotation

0-127	Counterclockwise rotation, from slow to fast
128-133	Static
134-255	Clockwise rotation, from slow to fast

Channel 3 – Color

0-7	Multicolor
8-15	Red

16-23	Green
24-31	Red and Green
32-39	Blue
40-47	Blue and Red
48-55	Blue and Green
56-65	Red, Green and Blue
66-207	Sequential color change, from slow to fast
208-255	Strobe, from slow to fast

Channel 4 – Horizontal movement

0-127	Manual adjustment, from right to left
128-255	Auto movement, from right to left

Channel 5 – Horizontal movement speed

0-255	From fast to slow
-------	-------------------

Channel 6 – Vertical movement

0-127	Manual adjustment
128-255	Auto vertical movement

Channel 7 – Vertical movement speed

0-255	From fast to slow
-------	-------------------



19 channels (Advanced)

Channel 1 – Control modes Only when Ch 1 is set between 245-255, Ch 2-19 will function.

0-18	Laser off
19-30	Auto shows
31-42	3D Auto shows
43-54	Auto beam show
55-66	Lumia effect
67-78	Effect 1
79-90	Effect 2
91-102	Effect 3
103-114	Effect 4
115-126	Effect 5
127-138	Auto shows, sound-controlled
139-150	3D Auto show, sound-controlled
151-162	Auto beam show, sound-controlled
163-174	Lumia effect, sound-controlled
175-186	Effect 1, sound-controlled
187-198	Effect 2, sound-controlled
199-210	Effect 3, sound-controlled
211-222	Effect 4, sound-controlled
223-234	Effect 5, sound-controlled
235-244	Manual effect 1
245-255	Manual effect 2

Channel 2 – Pattern progression

0-51	Basic form
52-103	2 nd form
104-155	3 rd form
156-207	4 th form
208-255	5 th form

Channel 3 – Patterns  **Ch 2 and Ch 3 are connected to each other.** 

The full pattern chart (see page 22).

Choose your preferred pattern by adjusting the value of Channel 3. Subsequently, adjust the value of Channel 2 to gain access to secondary patterns.

Channel 4 – Laser show effects

0-31	3D shape
32-63	Multicolor
64-95	Water effect
96-127	Multiplication effect
128-159	Multicolor
160-191	Multiplication (pattern in the middle + circular multiplication)
192-255	Multicolor (bright)

Channel 5 – 3D Rotation effect  **Ch 4 needs to be set between 0-31 for Ch 5 to work.** 

0-4	Static
5-127	Counterclockwise rotation, from slow to fast
128-133	Static
134-255	Clockwise rotation, from slow to fast

Channel 6 – Color

0-7	Purple
8-15	Red
16-23	Green
24-31	Yellow
32-39	Blue
40-47	Purple
48-55	Cyan
56-63	White
64-159	Sequential color change, from slow to fast
160-207	Progressive color change, from slow to fast
208-255	Strobe, from slow to fast

Channel 7 – Line drawing effect

0-123	Manual drawing
124-127	Blackout
128-255	Auto drawing, from slow to fast

Channel 8 – Zoom

0-127	Manual zoom out
128-144	Fast auto zoom out
145-209	Fast auto zoom in
210-255	Fast zoom in and zoom out

Channel 9 – Zoom speed

0-255	From fast to slow
-------	-------------------

Channel 10 – X-axis rotation

0-127	Manual rotation
128-255	Automatic rotation

Channel 11 – X-axis rotation speed

0-255	From Fast to slow
-------	-------------------

Channel 12 – Y-axis rotation

0-127 Manual rotation

128-255 Automatic rotation

Channel 13 – Y-axis rotation speed

0-255 From Fast to slow

Channel 14 – Clockwise rotation

0-127 Manual rotation

128-255 Automatic rotation

Channel 15 – Clockwise rotation speed

0-255 From fast to slow

Channel 16 – Horizontal movement, from left to right

0-127 Manual adjustment

128-255 Automatic movement

Channel 17 – Horizontal movement speed

0-255 From fast to slow

Channel 18 – Vertical movement, from the bottom to the top




































 











 









 
 







 













0-127 Manual adjustment

128-255 Automatic movement

 Channel 19 – Vertical movement speed

0-255 From fast to slow

 Patterns

Channel 3	Channel 2 0-51	Channel 2 52-103	Channel 2 104-155	Channel 2 156-207	Channel 2 208-255
0-15					
16-31					
32-47					
48-63					
64-79					
80-95					
96-111					
112-127					
128-143					
144-159					
160-175					
176-191					
192-207					
208-223					
224-239					
240-255					

Maintenance

The Showtec Galactic requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced.

Disconnect the mains power supply and then wipe the cover with a damp cloth. Wipe the front glass panel clean with glass cleaner and a soft cloth. Do not use alcohol or solvents. The front glass panel will require weekly cleaning, as smoke-fluid tends to build up residues, reducing the light-output very quickly. Do not immerse in liquid.

Keep connections clean. Disconnect electric power, and then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every year in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- 01) All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
- 02) There may not be any deformations on housings, fixations and installation spots.
- 03) Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
- 04) The electric power supply cables must not show any damages or material fatigue.

Replacing the Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below.

- 01) Unplug the unit from electric power source.
- 02) Insert a screwdriver into the slot in the fuse cover. Gently pry up the fuse cover. The fuse will come out.
- 03) Remove the used fuse. If brown or unclear, it is burned out.
- 04) Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Troubleshooting

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

No Light

If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect three potential problem areas as: the power supply, the laser, the fuse.

- 01) Power supply. Check that the unit is plugged into an appropriate power supply.
- 02) The laser. Return the Galactic to your Showtec dealer.
- 03) The fuse. Replace the fuse. See page 22 for replacing the fuse.
- 04) If all of the above appears to be O.K., plug the unit in again.
- 05) If you are unable to determine the cause of the problem, do not open the Galactic, as this may damage the unit and the warranty will become void.
- 06) Return the device to your Showtec dealer.

No Response to DMX

Response: Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

- 01) Check the DMX setting. Make sure that DMX addresses are correct.
- 02) Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
- 03) Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

Problem	Probable cause(s)	Remedy
One or more fixtures do not function at all	No power to the fixture	<ul style="list-style-type: none"> • Check that power is switched on and cables are plugged in
	Primary fuse blown	<ul style="list-style-type: none"> • Replace fuse
Fixtures reset correctly, but all respond erratically or not at all to the controller	The controller is not connected	<ul style="list-style-type: none"> • Connect controller
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed)	<ul style="list-style-type: none"> • Install a phase reversing cable between the controller and the first fixture on the link
Fixtures reset correctly, but some respond erratically or not at all to the controller	Poor data quality	<ul style="list-style-type: none"> • Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link
	Bad data link connection	<ul style="list-style-type: none"> • Inspect connections and cables. Correct poor connections. Repair or replace damaged cables
	Data link not terminated with 120 Ohm termination plug	<ul style="list-style-type: none"> • Insert termination plug in output jack of the last fixture on the link
	Incorrect addressing of the fixtures	<ul style="list-style-type: none"> • Check address setting
	One of the fixtures is defective and disturbs data transmission on the link	<ul style="list-style-type: none"> • Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together • Have the defective fixture serviced by a qualified technician
Shutter closes suddenly	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed)	<ul style="list-style-type: none"> • Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically
	The laser diode has lost its index position and the fixture is resetting the effect	<ul style="list-style-type: none"> • Contact a technician for servicing the problem persists
No light or laser cuts out intermittently	Fixture is too hot	<ul style="list-style-type: none"> • Allow fixture to cool • Make sure air vents at control panel and front lens are not blocked • Turn up the air conditioning
	Laser damaged	<ul style="list-style-type: none"> • Disconnect fixture and return to your dealer
	The power supply settings do not match local AC voltage and frequency	<ul style="list-style-type: none"> • Disconnect fixture. Check settings and correct if necessary

Product Specifications

Model:	Galactic FX RGB-1000
Input Voltage:	AC 100-240V, 60/50Hz
Continuous Power:	70 Watt
Fuse:	1.6AL/250V
Dimensions:	290 x 260 x 205 mm (LxWxH)
Weight:	4 kg
Operation and Programming	
Signal pin OUT:	pin 1 earth, pin 2 (-), pin 3 (+)
Set Up and Addressing:	Red LED display for all settings
DMX Channels:	7 and 19 channels
Signal input:	3-pin DMX signal connector IN
Signal output:	3-pin DMX signal connector OUT
Electro-mechanical effects	
Laser Class:	4
Laser Power:	1220mW (190mW 638nm Red, 110mW 532nm Green, 920mW 450nm Blue)
Light Source:	1 x 5W LED
Strobe:	0-20Hz
Cooling:	Cooling fans and TE Cooling
Beam diameter:	<20mm at aperture
Pulse Data, All Pulses:	<4Hz (>0.25 sec)
Divergence (each beam):	<2 mrad;
Divergence (total light):	<160 degrees
Safety Features:	Key switch, Interlock
DMX-control:	Via standard DMX-controller
Control Modes:	Built-in Programs, Manual, Master/Slave, Sound
Housing:	Black Metal & Flame-retardant plastic
Connections:	Dedicated IEC Power & Data connector
Laser Safety:	EN/IEC 60825-1 Ed 2, 2007-03
Max. ambient temperature t_a :	40°C
Minimum distance:	
Minimum distance from flammable surfaces:	0.5m
Minimum distance to lighted object:	1m



Design and product specifications are subject to change without prior notice.



Website: www.Showtec.info

Email: service@highlite.com

Dimensions

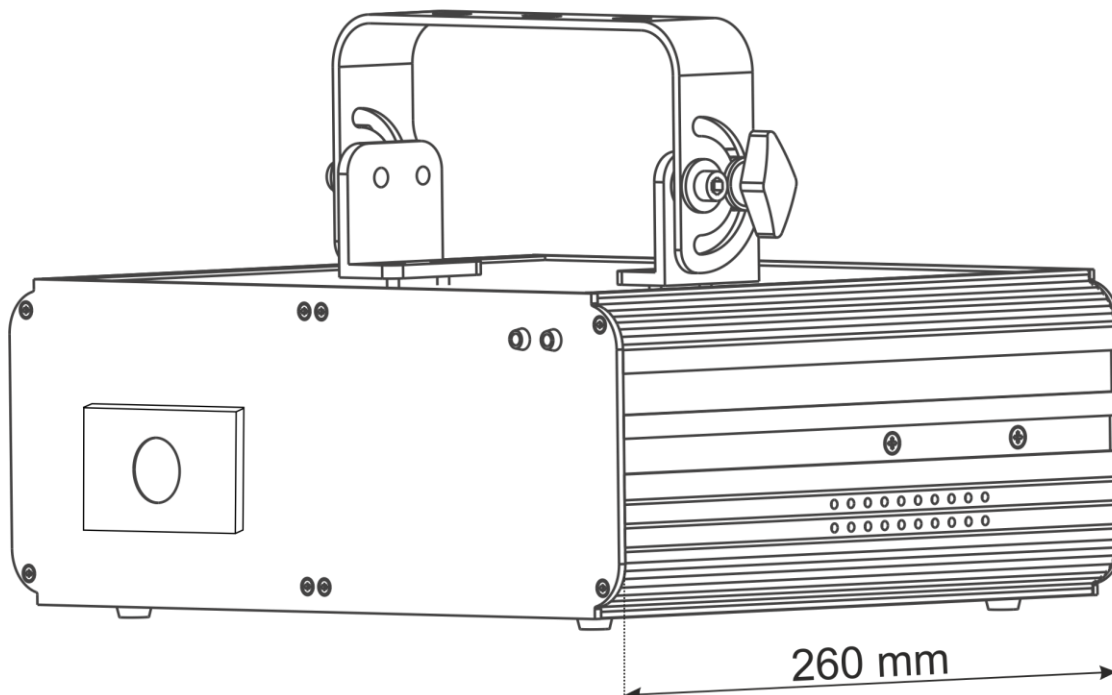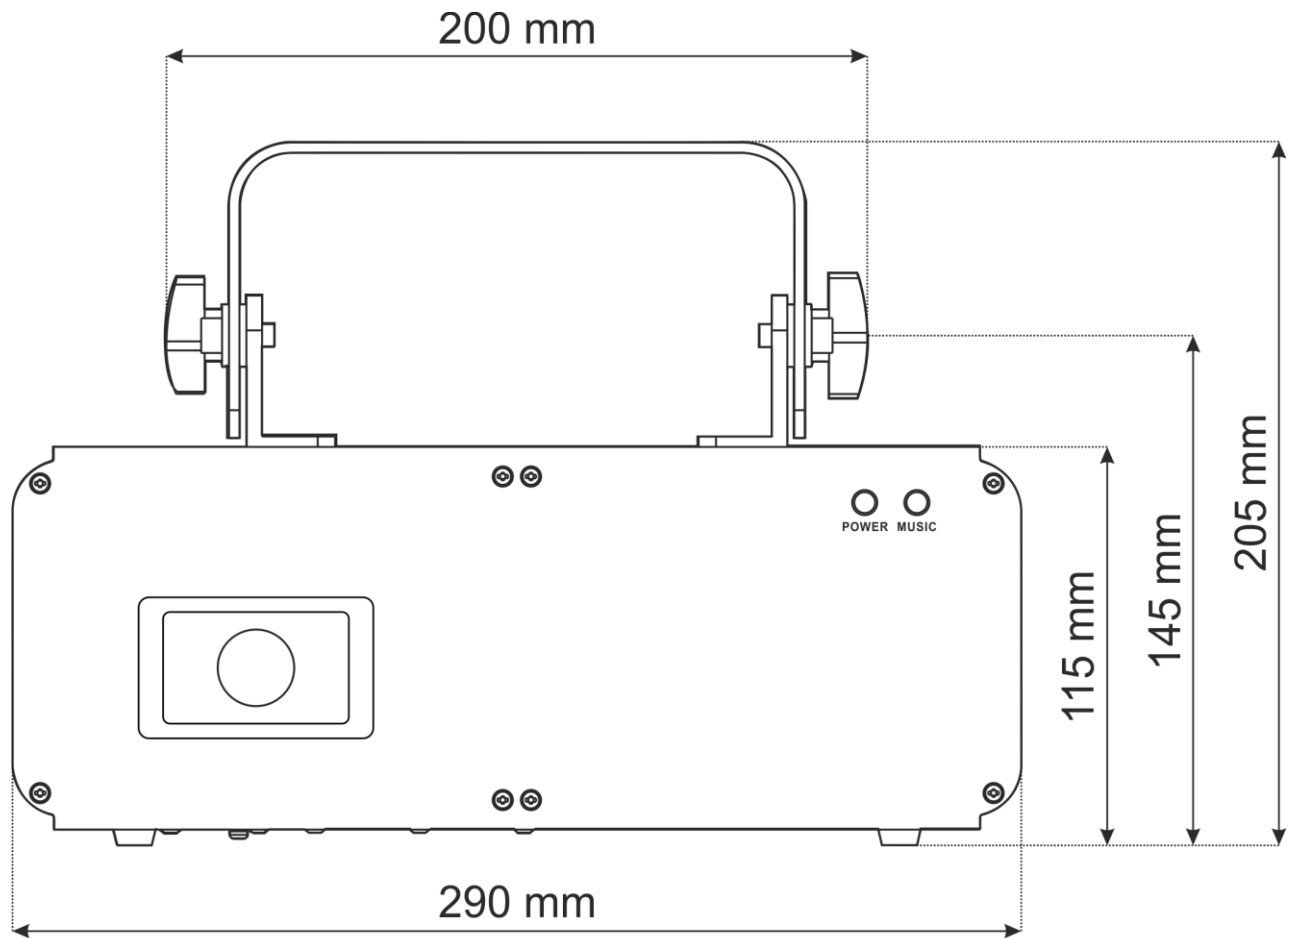



©2019 Showtec