

#### **Features**



Deepen the cover Prevent glare effectively



RGB+CCT 16 Millions of colors to choose



Color temperature 2700K~6500K



Dim brightness/ Saturation



2.4G RF wireless transmission technology



Signal transmitting & Modes synchronization



Remote control Control distance 30m



Smartphone APP control (2.4GHz gateway is needed)



Support third party voice control (2.4GHz gateway is needed)

### 18W Anti-glare RGB+CCT LED Downlight

Model No.: FUT072

Input Voltage: AC100~240V 50/60Hz

Power: 18W

Working Temp.: -20~60°C CRI: >80 PF: >0.5

Color Temperature: 2700K~6500K

Luminous Flux: 1200LM Lifespan: 50000 hours Beam Angle: 60° RF: 2.4GHz


Control Distance: 30m





#### Instructions

- 1. Please open the hole on the ceiling according to the correct size of Diagram 1.
- 2. Connect the driver properly according to the wire connection Diagram 2. And then put the driver and wire into the ceiling from the hole.
- 3. Push in the two spring elements, make sure that they are deployed and anchored on the back of the ceiling Diagram 3 and 4.



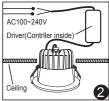

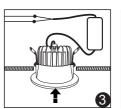

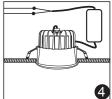

Link / Unlink

Anti-glare RGB+CCT LED Downlight

Model No.: FUT072

Compatible with these remote controls (Purchase separately)



✓!\NOTE:



















Light will work after linking with remote control; for more details, pls read the remote instruction.

## **Dynamic Mode Sheet**


Number	Dynamic Mode	Brightness / Saturation / Speed
1	Mardi Gras	
2	Automatic color change	
3	Sam	
4	Gemstone	A disserted a
5	Twilight	Adjustable
6	American	
7	Fat Tuesday	
8	Party	
9	Slow Color Splash	

## Signal transmitting

One Downlight can transmit the signals from the remote control to another Downlight within 30m, as long as there is a Downlight within 30m, the remote control distance can be limitless.

# **Modes synchronization**

Different Downlight can work synchronously when they are started at different times, controlled by the same remote, under same dynamic mode and within 30m distance

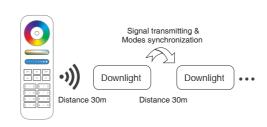

## **Attention**

- 1. When install the lighting fixtures, pls switch off the power to make sure the safty.
- 2. Please check whether the input voltage supply is in accordance with the lighting fixtures.
- 3. Non-professional user cannot dismantle the lighting fixtures directly, otherwise, it may cause fire and electric shock.
- 4. Please do not use lighting fixtures around the mental area and high magnetic field, otherwise, it will badly affect the control distance.

